

Outdoor Wireless Camera

Model: WC-520



1. Package Contents



Outdoor Wireless Camera
Model: WC-520



Power Adapter




Ethernet Cable




Mounting Accessories

2. Connect the IP-Camera



NOTE: The Outdoor Wireless Camera will only work with the SkylinkNet Internet Hub and the App. Please set up the Internet Hub and the SkylinkNet App first in order to connect the Outdoor Wireless Camera. If you want setup the camera without the SkylinkNet Internet Hub, please contact Skylink Customer Service for instructions.

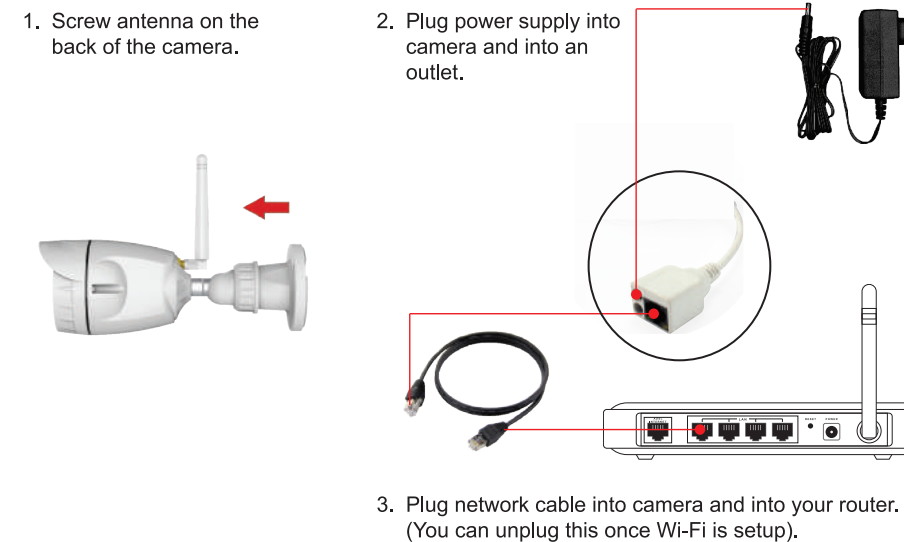


3. Setup the IP-Camera

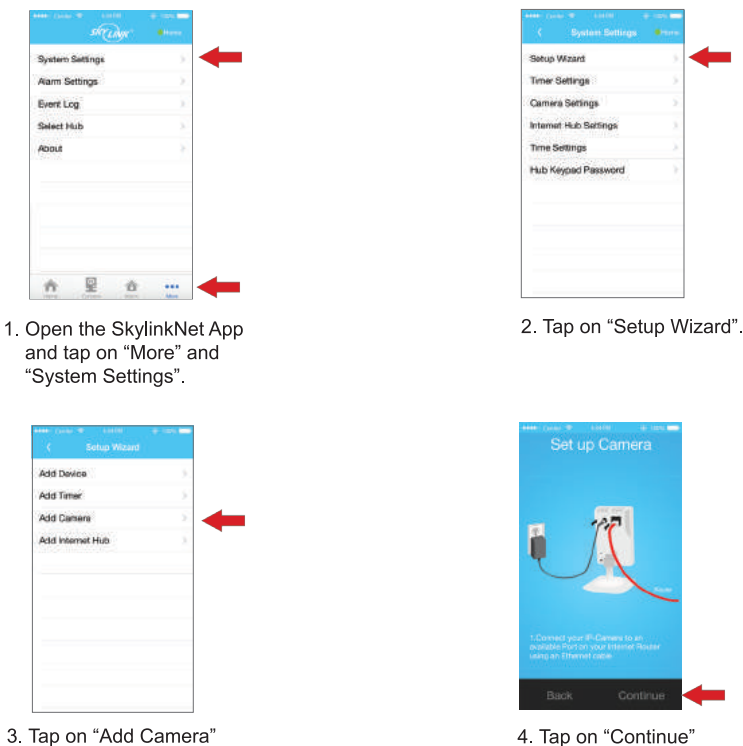


4. Setup the IP-Camera (Continued)

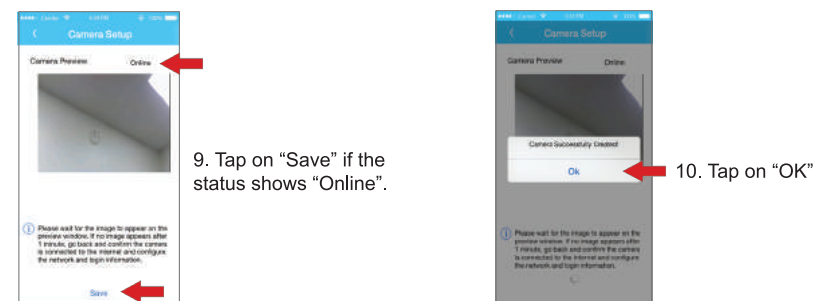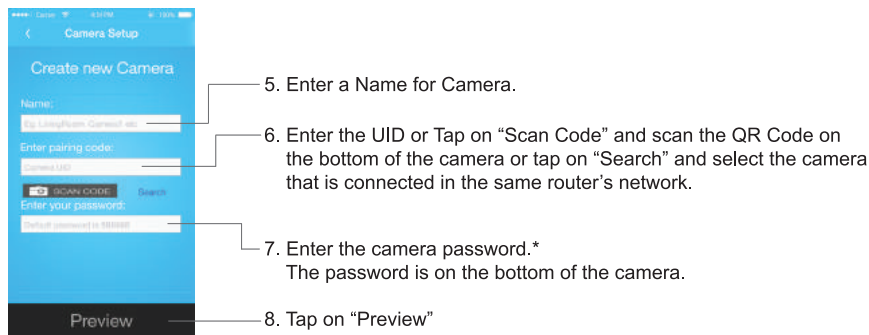

4. Setup Wi-Fi

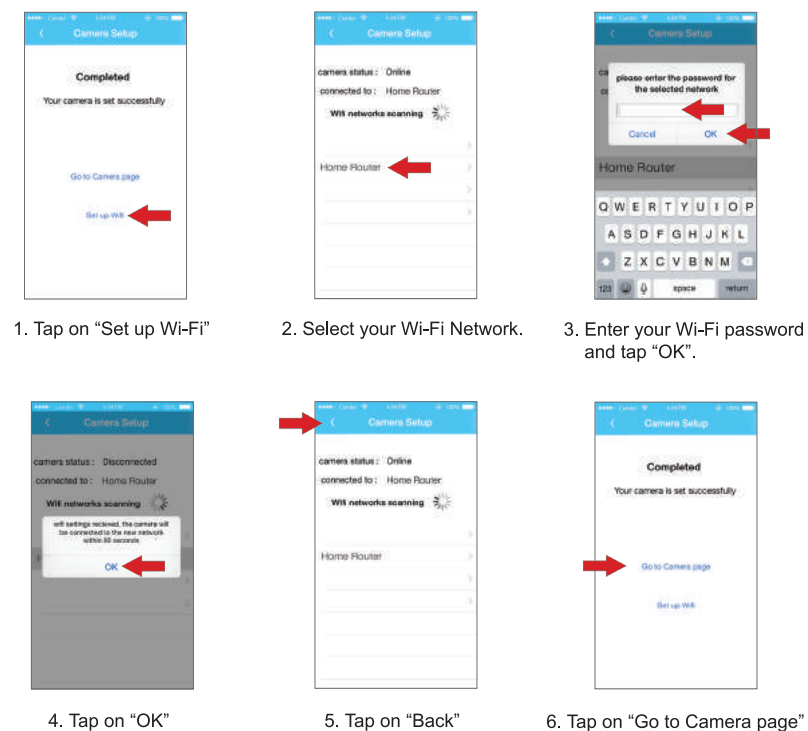

5. Camera Screen Overview

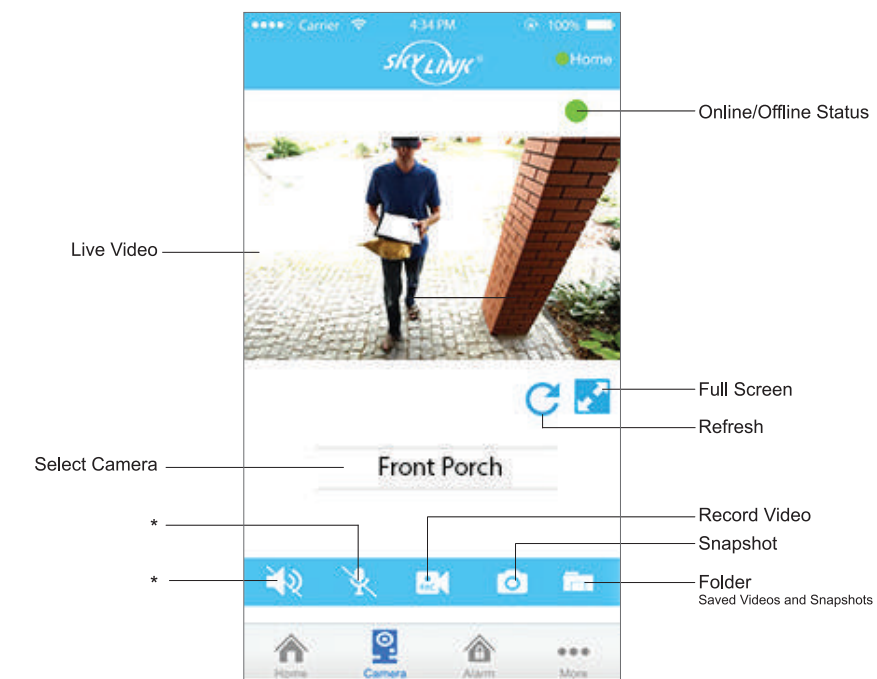

6. Warranty / Customer Service

This product is guaranteed to be free of defects in materials and workmanship for 1 year from the date of purchase. If this product is defective, call 1-800-304-1187 for repair or replacement parts. Guarantee does not include normal wear and tear or batteries.



If you have any questions, problems or missing parts, please call Skylink Customer Support:

1-800-304-1187

9:00 AM – 5:00 PM EST, Monday-Friday

Or e-mail us at support@skylinkhome.com

www.skylinkhome.com

*Change the default password in the camera settings for security purpose.

* - Not applicable