

 
 
 
# SOMFY INSTRUCTIONS

## TELIS RTS REMOTE CONTROLS

### SINGLE & FIVE CHANNEL

**Part #'s**

- 1810632 Telis 1 RTS Pure
- 1810633 Telis 5 RTS Pure
- 1810639 Telis 1 RTS Silver
- 1810641 Telis 5 RTS Silver
- 1810650 Telis 1 RTS Lounge
- 1810652 Telis 5 RTS Lounge
- 1810643 Telis 1 RTS Patio
- 1810645 Telis 5 RTS Patio

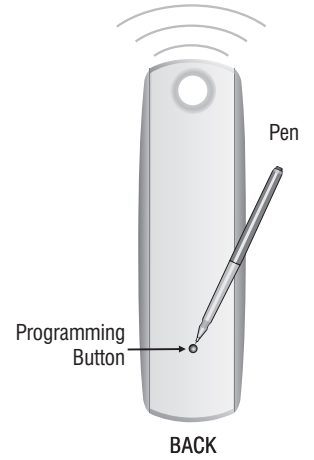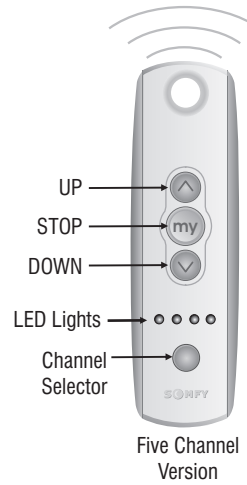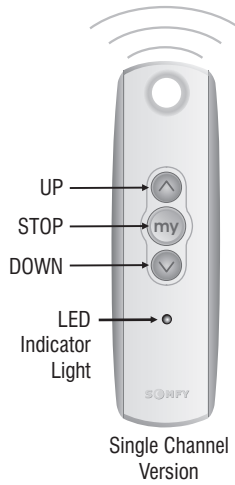


## PROGRAMMING – ADDING A NEW REMOTE OR OPERATING CHANNEL


A previously programmed remote can be used in order to add a new remote or channel to the Motorized Window Covering. If a Telis Transmitter has not been previously programmed, please refer to the installation instructions of the relevant RTS motorized window covering.

**Adding a Telis 1 RTS Transmitter only:**

 1. Using the previously programmed Telis remote, press and hold the programming button on back of remote until window covering "jogs."

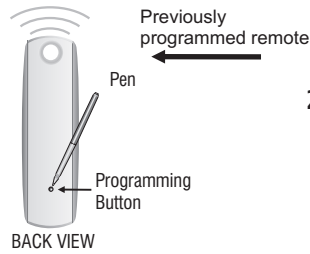


 2. Using the new Telis 1 remote, briefly press the programming button until the window covering "jogs." Window covering has now learned the commands of the new Telis remote.

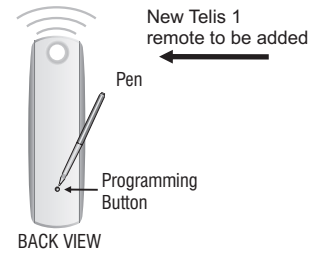

**Adding a Telis 5 RTS Transmitter only:**

 
1. Using the previously programmed Telis remote, press and hold the programming button on back of remote until window covering "jogs."

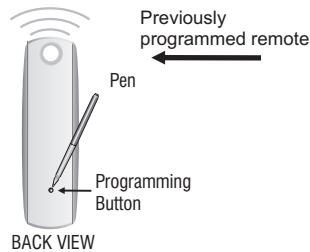

2. Using the new Telis 5 remote, select the desired channel using the CHANNEL SELECTOR BUTTON. (The LED will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)



 3. Using the Telis 5 remote, briefly press the programming button until the motorized window covering "jogs". The RTS motorized window covering has now learned the commands of the new Telis 5 remote.

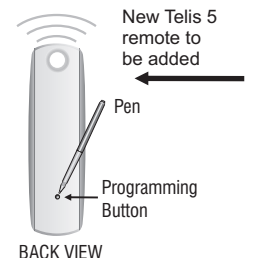

## PROGRAMMING - SETTING A FAVORITE POSITION (MY)

In addition to standard OPEN and CLOSE features, the Telis remote enables the user to pre-establish a favorite stop location. a.k.a. "MY" favorite position. An example could be to command the RTS motorized window covering to a 50% or 75% open or closed position when the "MY" button is briefly pressed.

### Telis 1 RTS Transmitter only:

- Using the UP (▲) or DOWN (▼) Buttons, activate the window covering to a desired position, for example halfway Open or Closed. Briefly press the "MY" (my) (stop) Button to stop the window covering once position is reached.

 


- Press and hold the "MY" (my) Button until the window covering "jogs." Favorite position is now recorded.



### Telis 5 RTS Transmitter only:


- Using the Telis 5 remote, select the appropriate channel using the CHANNEL SELECTOR BUTTON. (The LED lights will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)

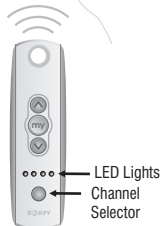

- Favorite "MY" (my) position can be activated from any previous window covering position. Example: Briefly press the "MY" (my) button while window coverings in a Open or Closed position.



 - Using the UP (▲) or DOWN (▼) Buttons, activate window covering to a desired position, for example halfway Open or Closed. Briefly press the "MY" (my) (stop) Button to stop the window covering once position is reached.

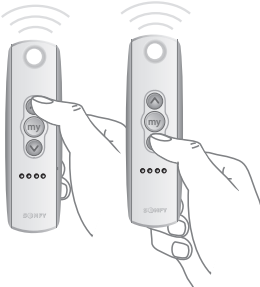


**Note: Activating window covering to a Favorite position while already "in-motion" will require two brief presses of the "MY" (stop) button. OR**

**Window covering MUST BE in a stationary (Stopped) position before the "MY" favorite position can be activated.**

## OPERATING THE MOTORIZED WINDOW COVERING

### Telis 1 RTS Transmitter only:

 - Use the UP (▲) or DOWN (▼) Buttons to open or close the window covering. If a specific position is necessary, briefly press the "MY" (my) (stop) Button to stop the window covering once position is reached.

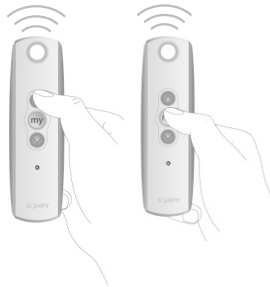

### Telis 5 RTS Transmitter only:

- Using the Telis 5 remote, select the appropriate channel using the CHANNEL SELECTOR BUTTON. (The LED lights will illuminate each time the Channel Selector Button is pressed, indicating the selected channel)

 


- Using the UP (▲) or DOWN (▼) Buttons to open or close the window covering. If a specific position is necessary, briefly press the "MY" (stop) (my) Button to stop the window covering once position is reached.



## REPLACING THE BATTERY

- Using a small screwdriver loosen the screws on the reverse side of the remote control and remove the back cover.
- Replace the battery with one 2430 Lithium 3V battery.

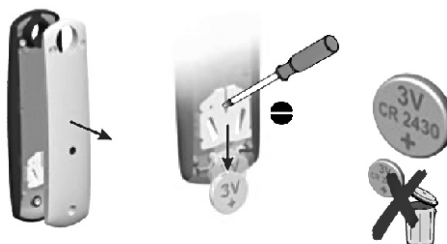

**NOTE: IN CASE OF A LOST TRANSMITTER, PROFESSIONAL PROGRAMMING ASSISTANCE IS REQUIRED. PLEASE CONTACT SOMFY AT [somfytech@somfy.com](mailto:somfytech@somfy.com) OR YOUR LOCAL DEALER AT [www.somfysystems.com/locatedealer](http://www.somfysystems.com/locatedealer).**

**somfy**