

KR19A SlimFire™ Remote installation and operating instructions

The KR19A works with the TM751 Transceiver. It lets you turn on and off two individually coded X10 Modules and brighten and dim lights connected to Lamp Modules and Wall Switch Modules. In the default state (after first fitting the battery) the KR19A is set to Housecode A. The first (top) two ON-OFF buttons control modules set to Unit Code 1. The second (middle) two buttons control A2.

1. Plug in an X10 TM751 Transceiver (sold separately).
2. To turn on or off X10 Modules set to Unit Code 1 (on Housecode A) press the first (top) ON or OFF button. To turn on or off X10 Modules set to Unit Code 2 (on Housecode A) press the second (bottom) ON or OFF button. To brighten or dim Lamp Modules or Wall Switch Modules press the number button first, then press Brighten or Dim button. If you want to control Modules 1 and 2 on Housecode A, that's it. You don't need to read any further.

To change the Housecode


- Press and hold the first (top) ON and OFF buttons at the same time for 2-3 seconds to enter Program Mode (the LED stays on).
- Press and release the first (top) **ON** button the appropriate number of times for the Housecode you want to set. Once for A, twice for B, etc. The LED blinks off for each press.
- Press the second (bottom) ON or OFF button to return to Normal Mode. The unit will also return to Normal Mode if no keys are pressed for more than 30 seconds.

To change the Unit Code for the first (top) two buttons (the second pair of buttons are always one # higher than the first pair, i.e. if you set the first button to 6, the second button controls 7, etc.).

- Press and hold the first (top) ON and OFF buttons at the same time for 2-3 seconds to enter Program Mode (the LED stays on).
- Press and release the first (top) **OFF** button the appropriate number of times for the Unit Code you want to set. Once for 1, twice for 2, etc. The LED blinks off for each press.
- Press the second (bottom) ON or OFF button to return to Normal Mode. The unit will also return to Normal Mode if no keys are pressed for more than 30 seconds.

To change the battery: Pry the unit apart and fit a CR2025 3V Lithium battery. Observe polarity.

F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

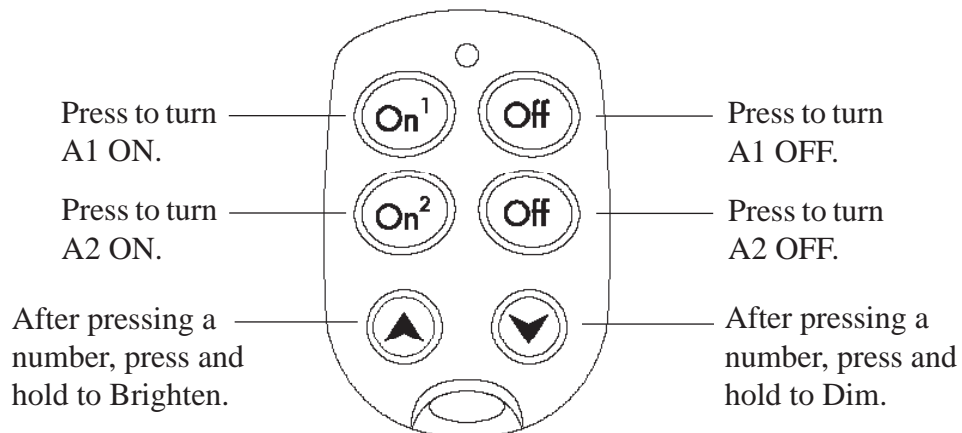

X10 Wireless Technology, Inc. Limited 90 Day Warranty

X10.com, a division of X10 Wireless Technology, Inc. (X10) warrants X10 products to be free from defective material and workmanship for a period of 90 days from the original date of purchase at retail. X10 agrees to repair or replace, at its sole discretion, a defective X10 product if returned to X10 within the warranty period and with proof of purchase.

If service is required under this warranty:

1. Call 1-800-675-3044 or e-mail sales@x10.com or visit www.x10.com, to obtain a Return Merchandise Authorization (RMA) number.
2. Return the defective unit postage prepaid to X10 (see address on back).
3. Enclose a check for \$4.00 to cover postage and handling.
4. Enclose a dated proof of purchase.
5. X10 is not responsible for shipping damage. Units to be returned should be packed carefully.

Please visit www.x10.com/warranty to complete your on-line warranty registration. Thank you.