


# AN128 ON/OFF MODULE

This plug-in On/Off Module is a transceiver which is a Z-Wave™ enabled device and is fully compatible with any Z-Wave™ enabled network. Z-Wave™ enabled devices displaying the Z-Wave™ logo can also be used with it regardless of the manufacturer, and ours can also be used in other manufacturer's Z-Wave™ enabled networks. Remote On/Off control of the connected load is possible with other manufacturer's Wireless Controller. Each module is designed to act as a repeater. Repeaters will re-transmit the RF signal to ensure that the signal is received by its intended destination by routing the signal around obstacles and radio dead spots.

## Adding to Z-Wave™ Network

In the front casing, there is an On/Off knob which is used to carry out inclusion, exclusion or association. Put a Z-Wave™ Wireless Controller into inclusion/exclusion mode, press the On/Off knob on the module to complete the inclusion/exclusion process.

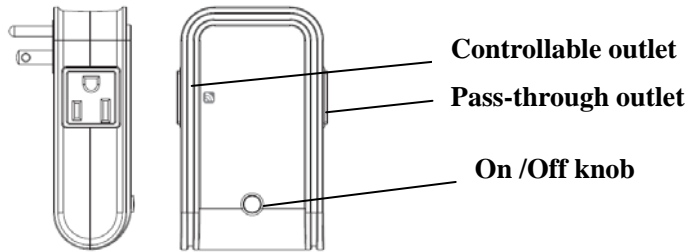

## Installation

1. Plug this On/Off Module into a wall outlet near the load to be controlled.
2. Plug the appliances into the On/Off Module. There are two outlets at different sides of AN128. The appliances plugged into the controllable outlet can be controlled by the On/Off knob and remote controller, the other side is non-controlled and acts as a pass-through outlet. Make sure the total load of both sides cannot exceed 1500 watts which means if the load of controllable outlet is changed, the other side will be altered accordingly. For instance, if the load of controllable outlet is about 1500 watts, the other should be 0 watt; while if the load of controllable outlet is 1200 watts, the other should be 300 watts.
3. Turn the knob or switch on the load to the ON position.

4. To manually turn ON the AN128 On/Off Module, press and release the On/Off knob. The red indicator LED will turn ON, and the load plugged into the AN128 On/Off Module will also turn ON.
5. To manually turn OFF the AN128 On/Off Module, simply press and release the On/Off knob. The red indicator LED will turn OFF and the load plugged into the AN128 On/Off Module will also turn OFF.

## Programming

The On/Off knob allows the user

- Turn on or off the load attached
- Include or exclude the module from the Z-Wave™ system
- Control other Z-Wave™ enabled devices

## Advanced Operation:

As long as any Z-Wave™ enabled device that can send below mentioned alarm command

**(ALARM\_REPORT, Alarm Type == 0x01, Alarm Level == 0x11)**

to the AN128 ON/OFF Module will enable its red indicator LED and the load plugged into the AN128 ON/OFF Module to be on and off intermittently for 10 seconds.

## Troubleshooting

Symptom	Cause of Failure	Recommendation
The Module not working and LED off	1. The Module is not plugged into the electrical outlet properly 2. The Module break down	1. Check power connections 2. Don't open up the Module and send it for repair.
The Module LED illuminating, but cannot control the ON/OFF Switch of the load attached	Check if the load plugged into the Module has its own ON/OFF switch	Set the ON/OFF switch of the load attached to ON
The Module LED illuminating, but the Detector cannot control the Module	1. Not carry out association 2. Frequency interference	1. Carry out association 2. Wait for a while to re-try

## Specification


Operating Voltage	120V/60Hz
Maximum Load	1400W
Range	Minimum 100 feet line of sight
Frequency Range	908.42 MHz

\*\* Specifications are subject to change and improvement without notice. A501111258R01

## Compatible Devices

The Everspring AN128 ON/Off module is fully Z-Wave™ device compatible. Homeowners with existing Z-Wave™ devices can easily add this device or more in to complete a safety network firmly. The following Everspring devices are compatible with AN128 On/Off module.

The following modules (sold separately) can be compatible with this device:

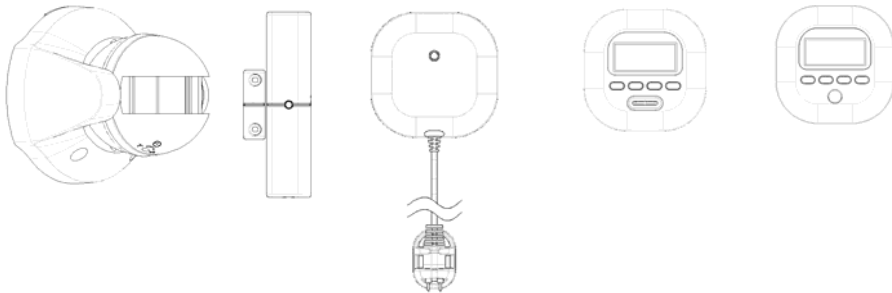

SP103	SM103	ST812	ST814	ST815
PIR Detector	Door/Windows Detector	Floor Detector	Temperature/Humidity Detector	Illumination Detector

**IMPORTANT! To ensure better compatibility, only purchase Everspring or other manufactures' Z-Wave™ Enabled devices.**



## Mobile of end product

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.